


AI Design Installation Guide


Chapter	Contents	Page
1.0	AI CAD Installation <i>(For AI CAD User only, AutoCAD user direct proceed to chapter 2.0)</i>	2 → 3
2.0	AI Design System Setup	4
3.0	AI Design System Update	5 → 6
4.0	Dongle Driver Installation	7 → 8
5.0	Backup Data Overwriting	9
6.0	AI Design System & Toolbar Reload	10
7.0	Team Viewer Setup (Optional)	11 → 13
8.0	DNC Linking Application Setup (Optional)	14

1.0 AI CAD Installation


- ◆ Open AI CAD setup file and double click it to run the setup.

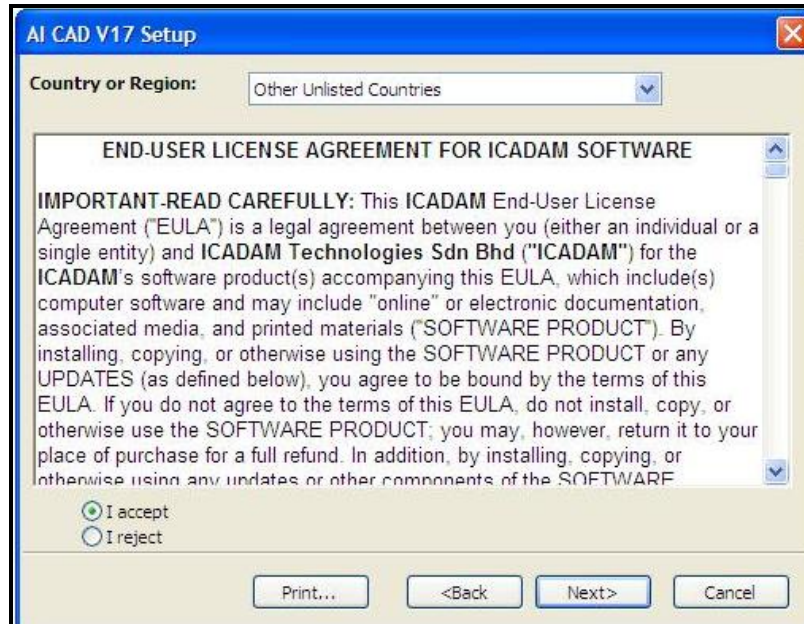


- ◆ Choose "I accept" and click on "Next >" button.

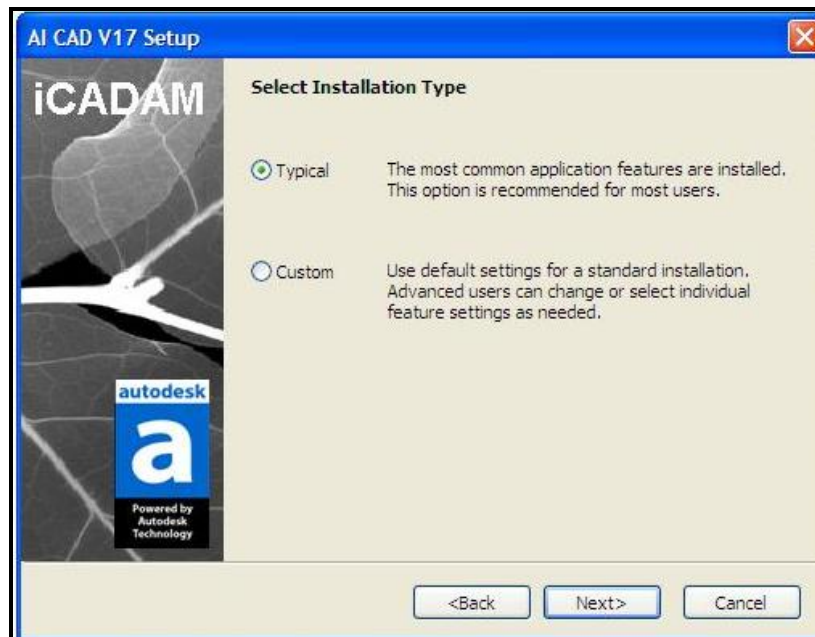

- ◆ Choose "Typical" and click on "Next >" button.

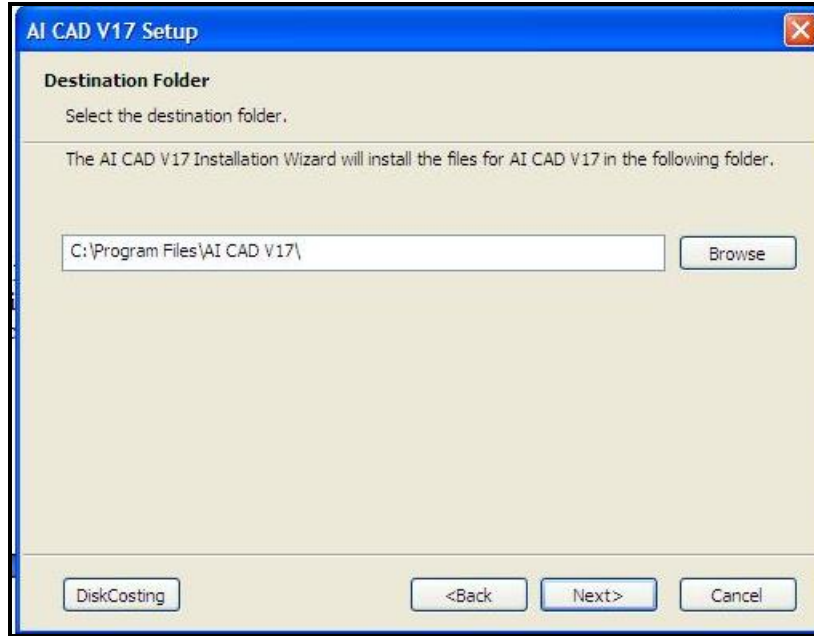


- ◆ Select your destination folder and click on “Next >” button.

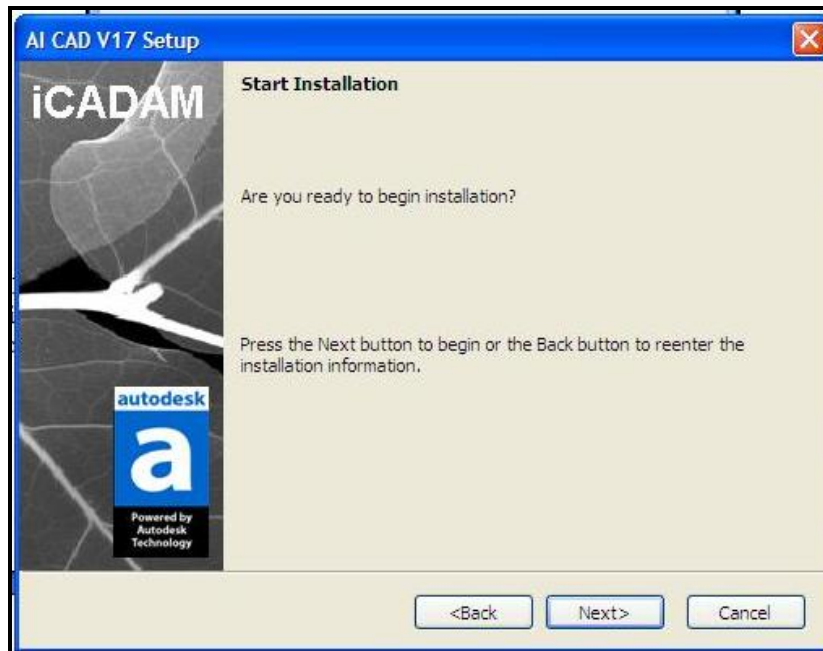


- ◆ Click on “Next >” button to start the installation.
- ◆ Complete AI CAD installation and you may proceed to chapter 2.0.

2.0 AI Design System Setup

- ◆ Open AI Design setup file (exp: AI Design Setup.exe in Setup folder) and double click it to run the setup.

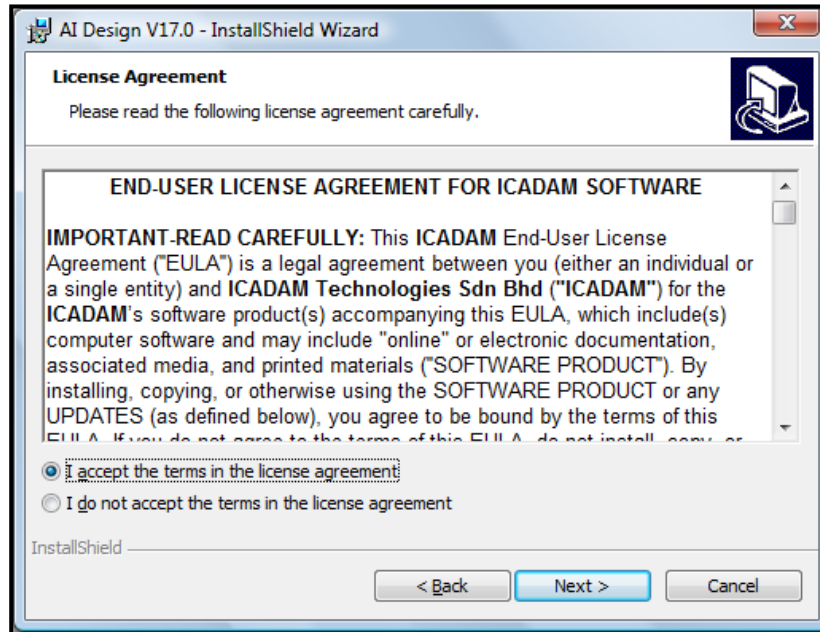


- ◆ Choose "I accept the terms in the license agreement" and click on "Next >" button.

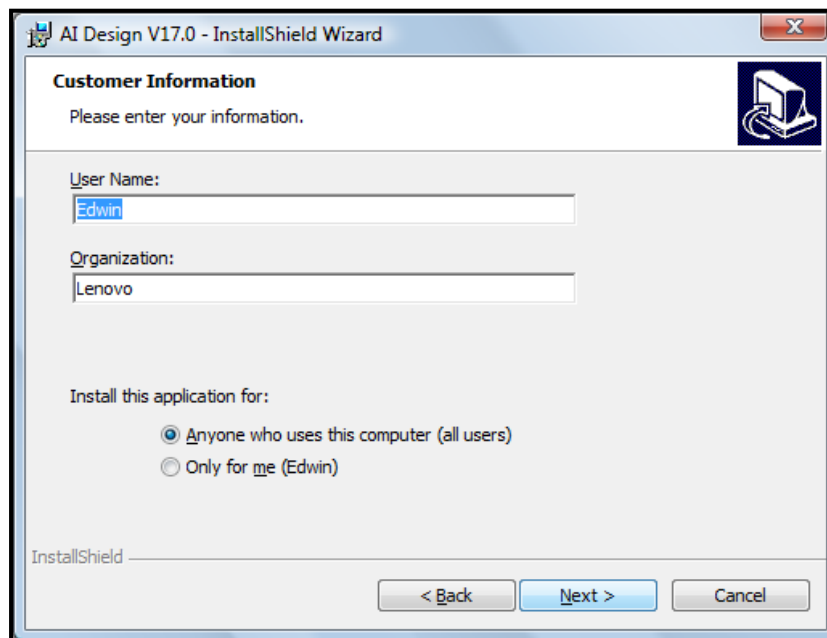


- ◆ Fill in User Name and Organization and click on "Next >" button.
- ◆ Click "Next >" and "Install" button to finish up the installation.
- ◆ Now you may proceed to Chapter 3.0.

3.0 AI Design System Update


- ◆ Double click and install all the Update files.

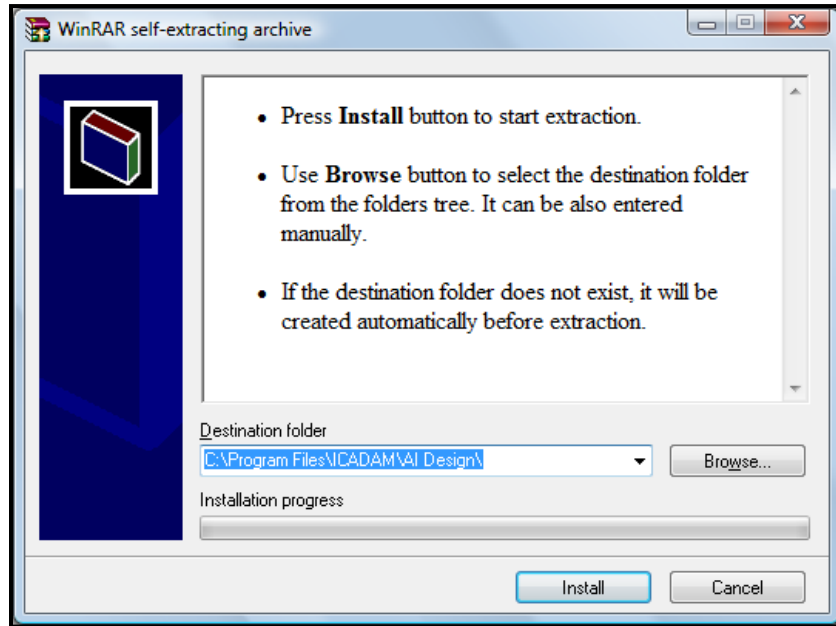

- ◆ Make sure the Destination folder is *C:\Program Files\ICADAM\AI Design*, else click the “Browse” button and browse it manually to *C:\Program Files\ICADAM\AI Design* and click the “Install” button.

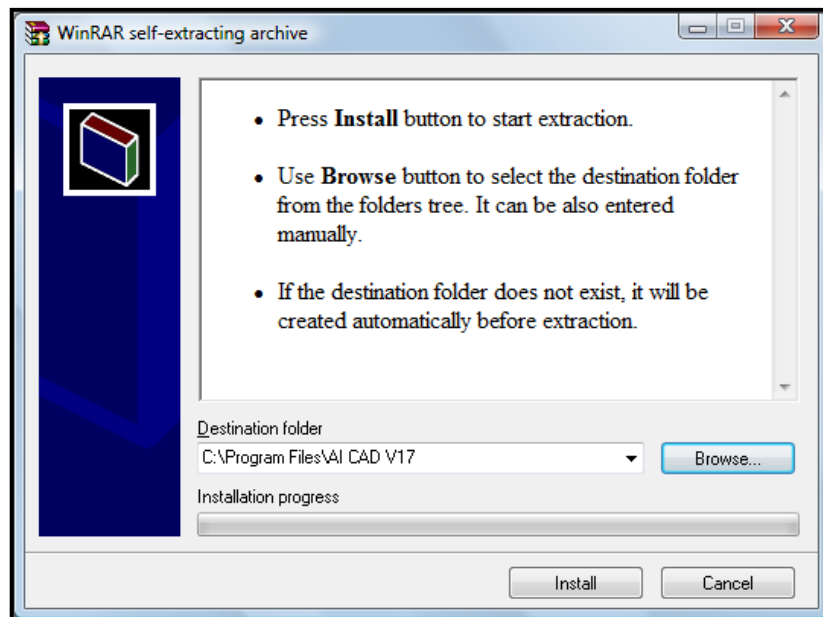

- ◆ For **AI CAD** users, you have to update another Update file (exp: AI_Wire_V17_OEM) to *C:\Program Files\AI CAD V17 for (AI CAD V17) or C:\Program Files\AI CAD 2005 for (AICAD 2005)*.

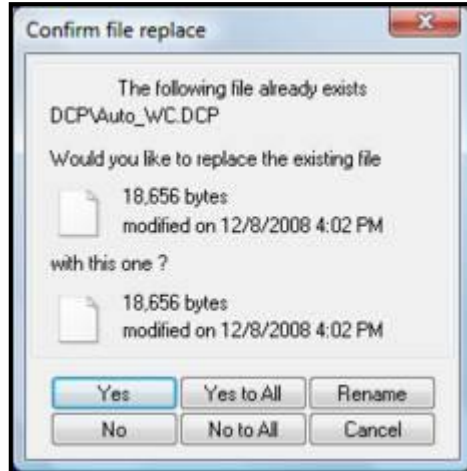

- ◆ Click “Yes to all” button.
- ◆ Repeat these steps for all the update execute files available.
- ◆ Now you may proceed to Chapter 4.0.

4.0 Dongle Driver Installation

- ◆ You may download the latest Sentinel Protection Driver from below link.
<http://www.eht.com.my/webshaper/store/viewProd.asp?pkProductItem=281>
- ◆ First of all, remove the Dongle Key.
- ◆ Double click on the Sentinel setup file (exp: Sentinel Protection Installer.exe) and run the installation.



- ◆ Choose "I accept the terms in the license agreement" and click on "Next >" button.



- ◆ Choose "Custom" and click on "Next >" button.




- ◆ Disable the “Sentinel Protection Server” and “Sentinel Keys Server” by click on the tab (arrow pointed) and select “This feature will not be available”.
- ◆ Click on “Next >” button and then “Install” button to finish up the installation.
- ◆ Now you may plug in the Dongle Key into your PC and proceed to chapter 5.0.

5.0 Backup Data Overwriting


- ◆ Delete the “Post, Machine, Data and Macro” folder in *C:\Program Files\ICADAM\AI Design*.
- ◆ Copy the backup folder such as (Post, Machine, Data and Macro) and paste them all into it.

6.0 AI Design System & Toolbar Reload

- ◆ In AutoCAD, type in AP in the command line and press Enter.

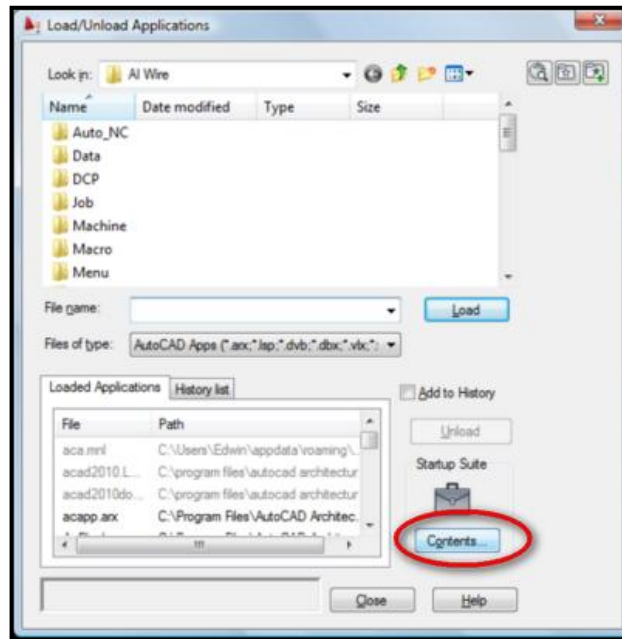


- ◆ Click on the “Contents” button.

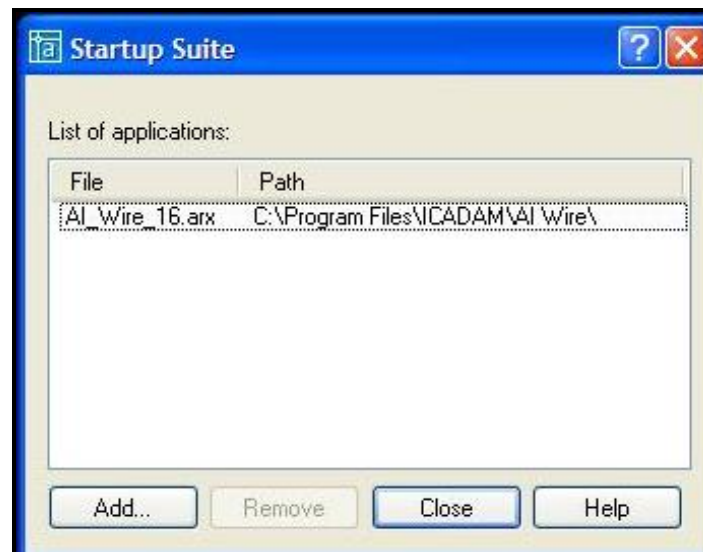


- ◆ Click on “Add...” button and browse into *C:\Program Files\ICADAM\AI Design*.
- ◆ For AutoCAD 2004 – 2006 user, select **AI_Design_16.arx** and click “OK” button.
- ◆ For AutoCAD 2007 – 2009 user, select **AI_Design_17.arx** and click “OK” button.
- ◆ Click OK again to exit the AP window.
- ◆ Type “**dw_setup**” in command line to load the wire cut menu and toolbar.

7.0 Team Viewer Setup (Optional)


- ◆ If you do not have the installer for Team Viewer, you can download it at the link below.
www.teamviewer.com/index.aspx
- ◆ Run the setup file.

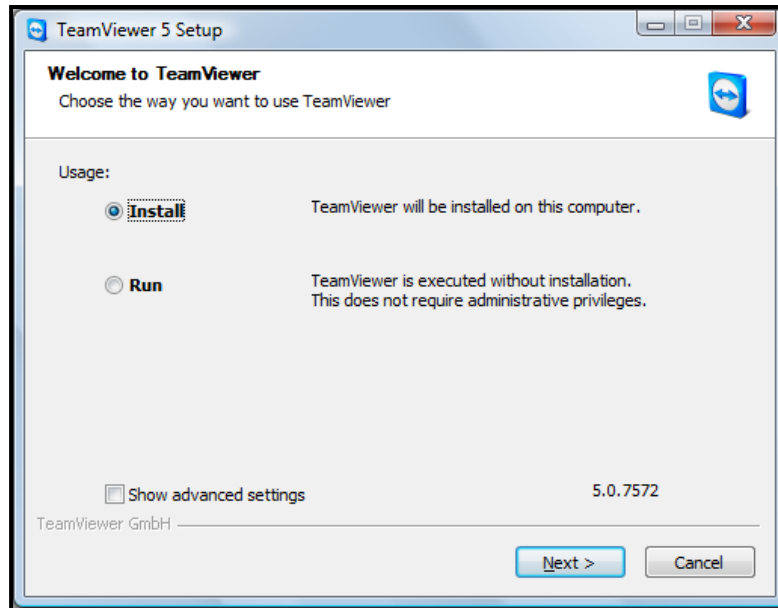


- ◆ Select “Install” and click on “Next >” button.

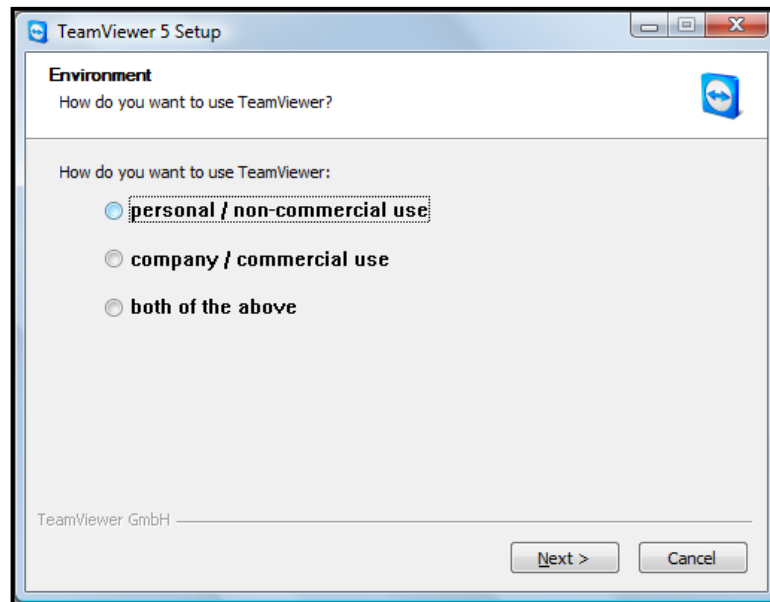


- ◆ Select “personal / non-commercial use” and click “Next >” button.

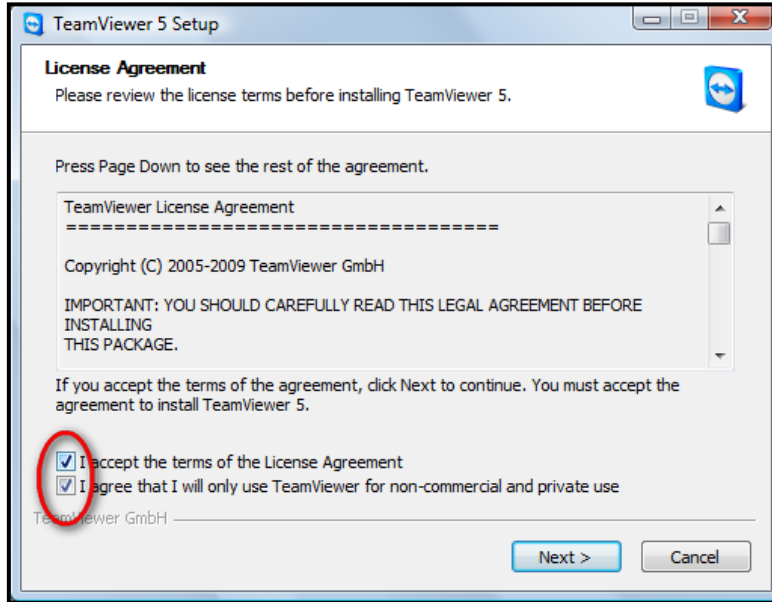

- ◆ Tick on both check-box and click “Next >” button.

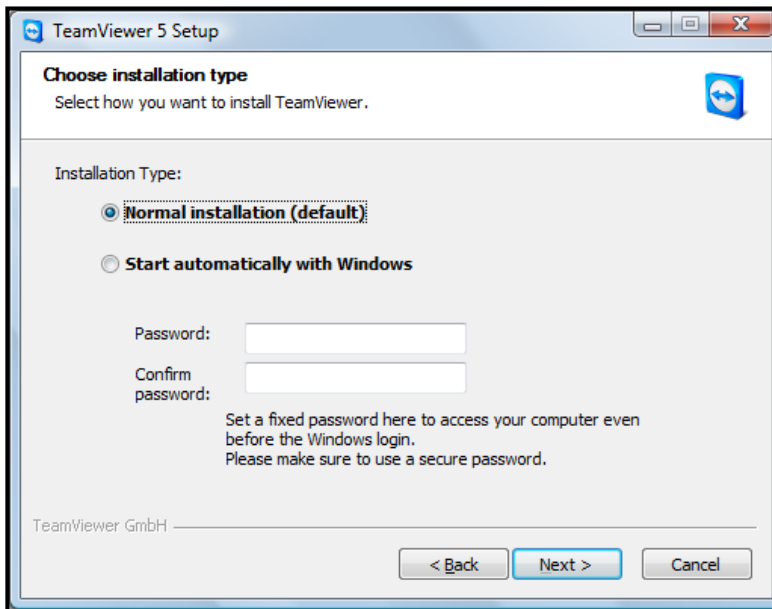


- ◆ Select “Normal installation (default)” and click on “Next >” button. However, you may also choose the other option to set the password manually and click “Next >” button.

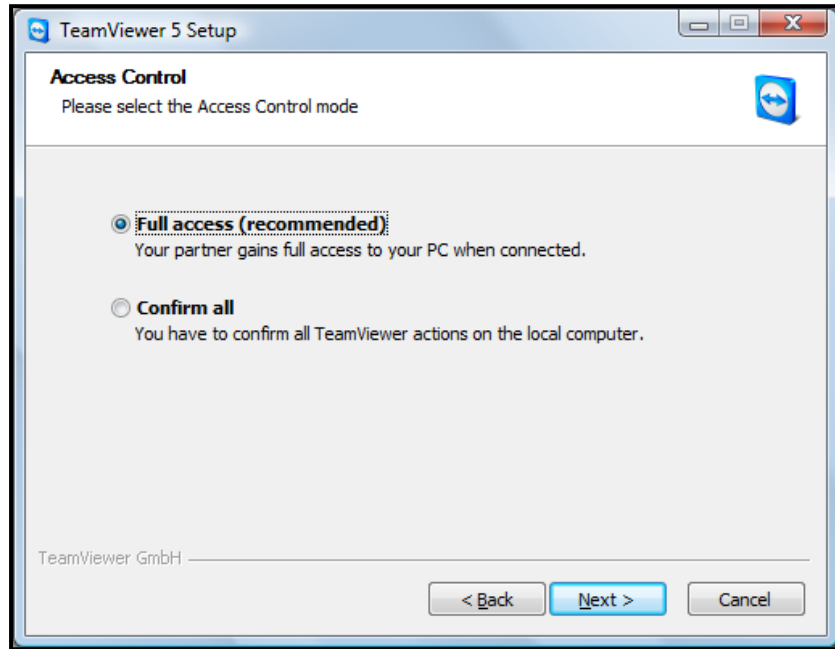

- ◆ Select “Full access (recommended)” and click on “Next >” button.
- ◆ Installation done.

8.0DNC Linking Application Setup(Optional)

- ◆ You may download DNC linking application from below link.
<http://www.eht.com.my/webshaper/store/viewProd.asp?pkProductItem=281>
- ◆ Extract the folder to your prefer location.

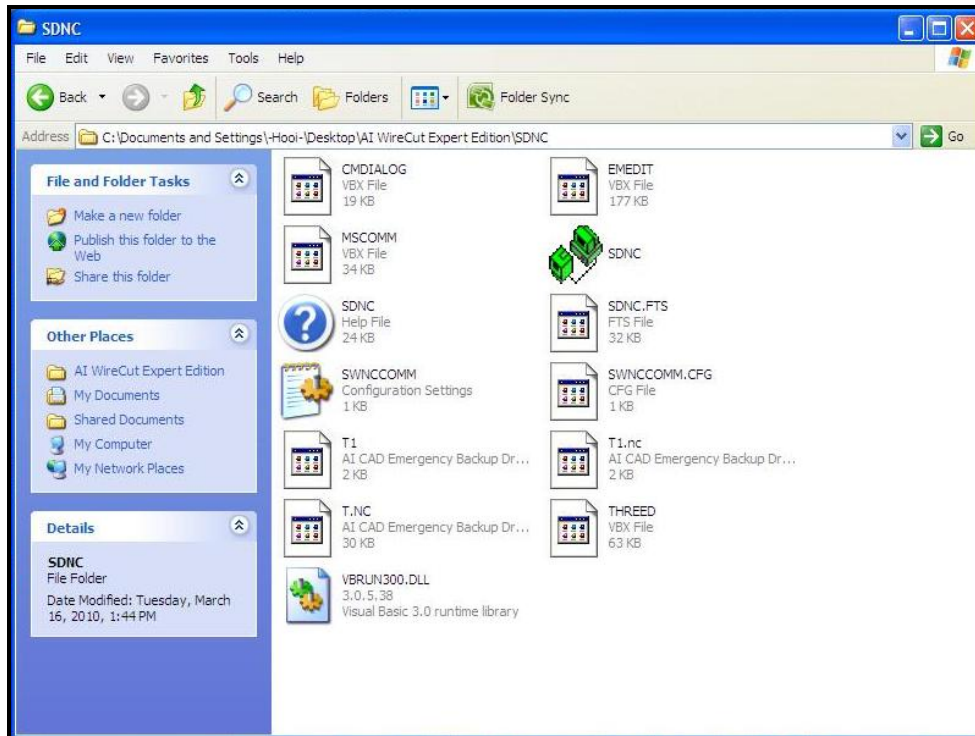

- ◆ Double click the green “SDNC” icon and you may start to use it now.